CODESYS RTE License 激活方式

此文档所用 Development System 版本: V3.5 SP13

此文档所用 RTE 版本: V3.5 SP13

操作步骤:

- 1. 打开 CODESYS IDE 软件
- 2. 新建 RTE 标准工程
- 3. CODESYS RTE 在 IPC 上启动
- 4. 选中 Tools——>License Manager , 弹出对话框【选择设备】

如 License 激活在 IPC 上,选择 Device

如 License 激活在个人 PC 的加密狗上(即 Dongle),选择 Workstation



5. 如 License 激活在 IPC 上,选择 Device,单机 Next 下一步

Dongle —> license 激活在 IPC 的加密狗上(需要额外的加密狗硬件)

Softcontainer —> license 激活在 IPC 本地上(即 IPC 的 codemeter 中,属于软激活)



6. 选择 Softcontainer, 单击下一步, 选择所要激活的 RTE 并选择 OK

ect the network path to the controller:		
- 💑 🖕 Gateway-1	Device Name:	Add gateway.
HARRIS [0001]	Gateway-1	Add device
	Driver:	Delete
	TCP/IP	
		Scan network
	IP-Address:	Wink
	Port:	
	1217	

7. 此时弹出 License Manager 对话框,选择 Install license

ontainer:			- 1
	Softcontainer: [2]: SN=32767-65089, Version=1.19, Chip=0, Rev=0 V R	lefresh B	link
Products			
	Name:		
	Company:		
	Unit counter:		
	License quantity:		
	Usageperiod:		
	Feature map:		
	Activation time:		
	Expiration time:		
	Firm code:		
	Product code:		
	Description:		
🖌 The li	ense for the product exists on the selected license container.		
🚹 The li	tense for the product exists on the selected license container, but is invalid (e.g. ex	xpired).	
The li	ense for the product does not exist on the selected license container.		
_			
		-	

8. 选择 Activate license,并选择 Next 下一步

Install licenses on Device Softcontainer 32767-65089 - Select	Operation X
Install Licenses What do you want to do?	
Activate license	
Use this option if this machine has internet access and the software v license activation ticket to you.	endor has supplied a
○ Request license	
If this machine does not have internet access, you can create a contr dongle, which can be activated over internet on another machine. Th update file can then be installed on this machine using "Install license"	ext file of your e resulting license
🔿 Install license	
If you have got a license update file, use this option in order to install	it to your dongle.
Cancel < Back Next >	Finish

9. 确保个人 PC 联网,在 Ticket ID 中输入从 3S 购买的 license 串码,并点击 Next 下一步

Install licenses on	Device Softcontainer 32767-65089 - Activate License	×
Install License: Activate a license	s over the internet	
Please enter your tio the software vendor	cket ID and select the license server. Both values have been provided r during the order process.	d by
Ticket ID:		
License server:	Default (http://license.codesys.com)	\sim
[Select ticket from repository	
	Cancel < Back Next > Finis	h

10. 等待激活完成

11. 如在第5步选择 Dongle 激活,则将从3S 购买的加密狗插在 IPC 的 USB 口上,选择 Next 下 一步,接下来步骤与第六步一样,只是在第7步弹出的 License Manager 对话框,会提示 license 容器是 Dongle,其他激活方式一样

License Ma	nager		×
Container:	Dongle: [0]: SN=3-3532280, Version=3.01, Chip=151, Rev=22 ~	Refresh	Blink
Droductor			

12. 如在第4步选择 workstation,为 license 激活在个人 IDE 所在的 PC,不建议选择此项激活

注意:

1. 如选择 Softcontainer 激活,即 license 与 IPC 绑定,授权已经激活在本地的 PC 上,如果 PC 因 windows 原因重装系统,那么 license 即会丢失,如遇到原因需要重装 windows 系统,那么重装前 需要与我方联系,我方操作做好 license 回退处理

2. 如选择 Softcontainer 激活,如果 RTE 需要升级,那么需要与我方进行联系沟通,防止 RTE 升级将 license 擦除

3. 如 license 成功激活,但是 RTE 运行还是提示 DEMO 模式,可联系我方,我方通过 TeamViewer 远程操作,确认问题原因。

4. 我方联系方式

邮箱: support@codesys.cn

电话: 0531-88822695